


MOVE IT WITH

ROLL-OR-KAR

DUAL TRUCKS

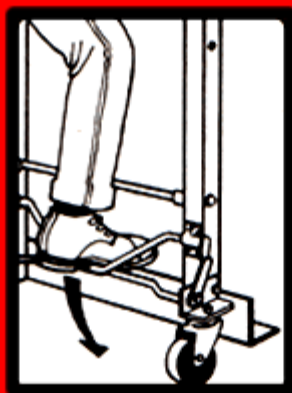

SIMPLE OPERATION

TO OPERATE, place one truck at each end of load, fasten straps and press foot-lever at each end to raise for moving. Note: Do not raise load until straps are tightened. For longer life of trucks, keep nuts and bolts tightened. Handles fold out of way when not in use. If your business demands moving heavy, bulky items, **ROLL-OR-KARI** should be a part of your business.

THREADING DIRECTIONS

Follow closely until familiar with threading.

Figure 1

Hold locking device in extreme outward position.

Figure 2

Strap is threaded through large opening around hinge post. Pull end through until in approximate adjustment.

Figure 3

Swing locking device to locking position. Note: end of strap is inside of tightened strap if correctly threaded.



 **ENRICK, Co.**